

Cleo Grande Canopy

295TDCLGC_

1.0




GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.



This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.

This product can be dimmed with a standard incandescent dimmer.

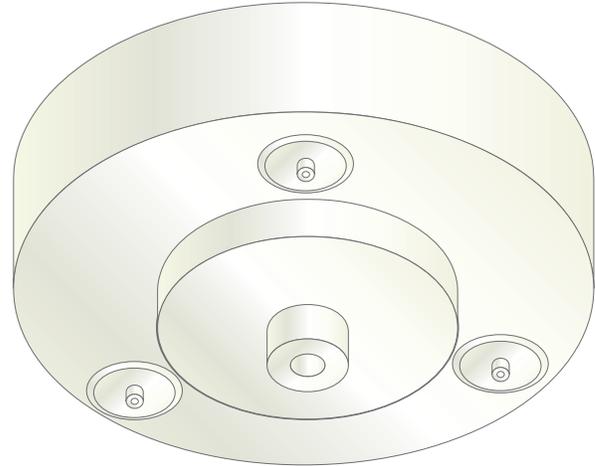


CAUTION—RISK OF FIRE


This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **TURN OFF POWER TO THE ELECTRICAL BOX.**

NOTE: Due to the weight and complexity of this fixture, assistance will be need for installation.

Preparing the Canopy

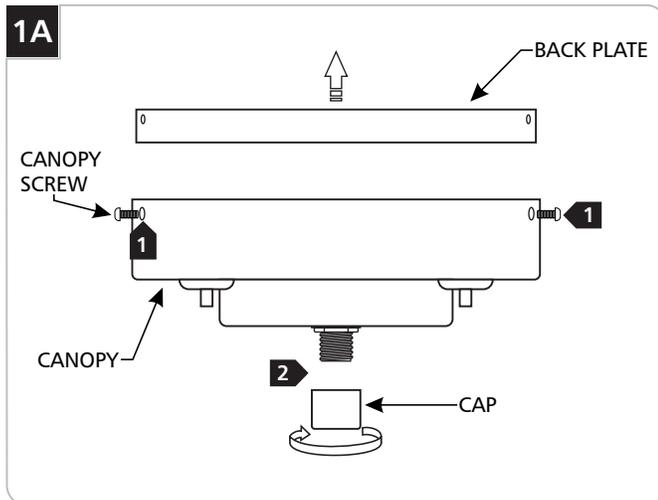


- 1** Unscrew and remove all three screws and separate the backplate from the canopy.
- 2** Unscrew and remove the cap.

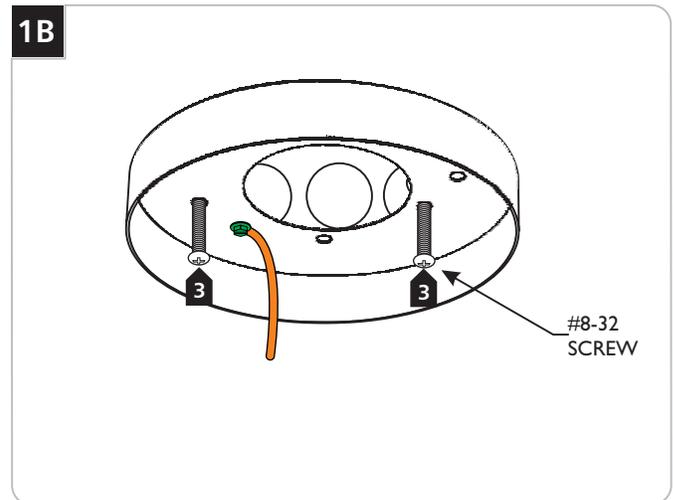

- 3** Mount the backplate to the electrical box with the two provided #8-32 screws.


Install the Fixture

2A

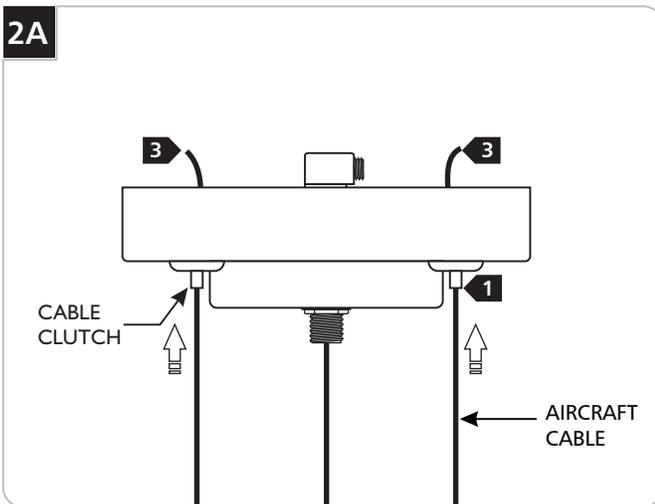

- 1 Feed the aircraft cables through the cable clutch in the canopy.
- 2 Evenly pull the aircraft cable up through the canopy to raise the fixture to the desired length.
- 3 Cut off the excess aircraft cable leaving enough for fine leveling later.


2B

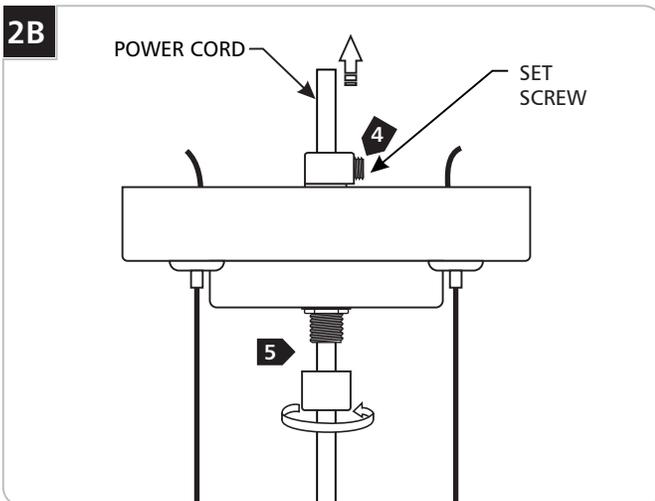

Note: Taping down the frayed end of the cloth cover may assist in feeding the power cord through the strain relief.

- 4 If necessary loosen the set screw in the strain relief and feed the power cord from the fixture through the cap and into the canopy.
- 5 Re-screw the cap back on.

2C

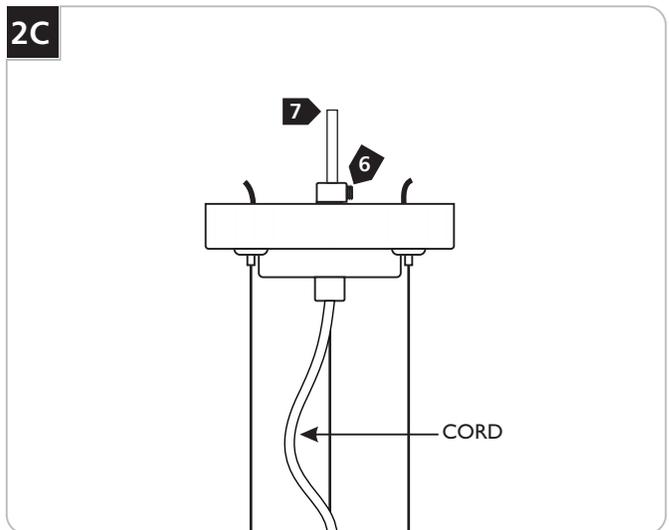


NOTE: The power cord does not support the fixture. For a casual "lazy cord" look, cut the power cord several inches longer than the drop height of the fixture.

- 6 Once the desired look is determined, tighten the set screw on the strain relief.
- 7 Leave 6" of the cord behind the canopy for power connections and cut the excess cord.


Install the Canopy

3A

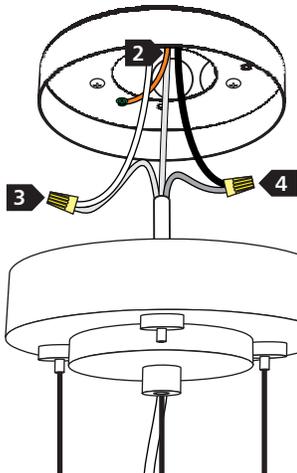


- 1 Strip the cable behind the canopy, and strip the ends of the inner wires.
- 2 Ground the fixture and the backplate to a suitable ground in accordance with local electrical codes.
- 3 Connect the wire with the white strip to the neutral power line wire with a wire nut.
- 4 Connect the remaining wire to the hot power line wire with a wire nut.

3B

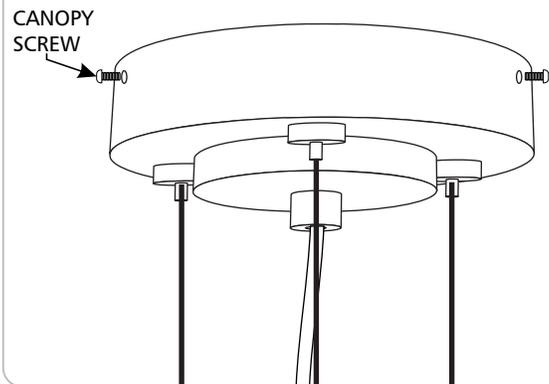

- 5 Place all wires and wire nut connections properly inside the electrical box.
- 6 Remount the canopy to the backplate by securing

3C

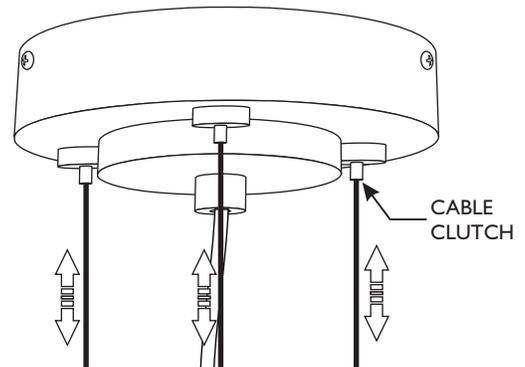

- 7 Adjust the aircraft cables until the fixture is level; feed the cable into the cable clutch to raise the fixture and push in on the cable clutch nipple to release the cable and lower the fixture.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077
847.410.4400

www.techlighting.com

© 2012 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company