

Finn Bath

700BCFINN_ 1.1



GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

This product can be dimmed with most ELV or TRIAC dimmers.


This instruction shows a typical installation.




CAUTION - RISK OF FIRE
 This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

Install the Fixture

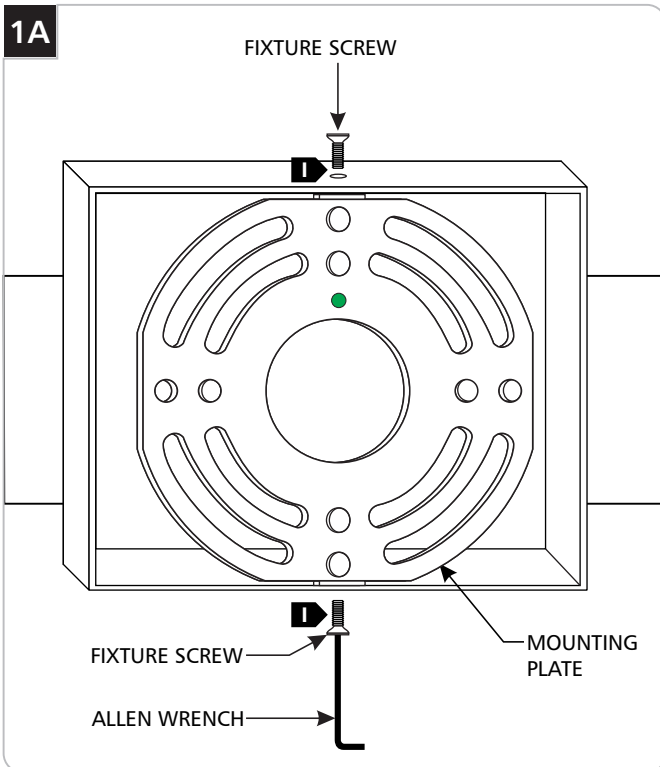


- 1** Remove the fixture screws located on the top and bottom of the fixture base with the provided Allen wrench.
- 2** Remove the mounting plate from the fixture base.

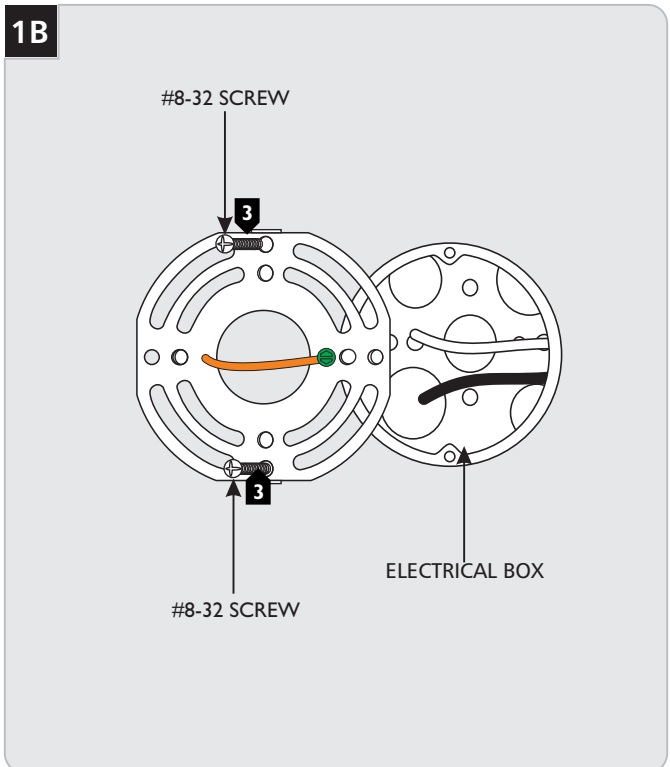

- 3** Install the mounting plate onto the electrical box with the two #8-32 screws provided.

1C

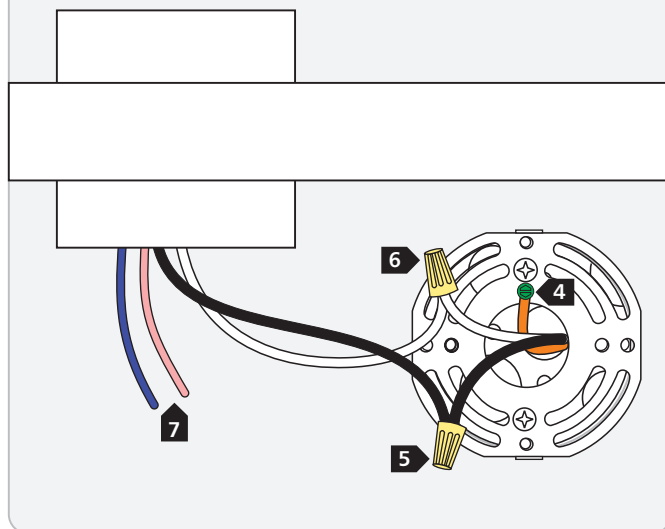

- 4 Connect the mounting plate ground wire to a suitable ground in accordance with local electrical codes.
- 5 Connect the black fixture wire to the hot power line wire with a wire nut.
- 6 Connect the white fixture wire to the neutral power line wire with a wire nut.
- 7 Use the pink/gray and purple dimming wires for 0-10v dimming application.
- 8 Properly place all wires and wire nut connections into the fixture base.
- 9 Mount the fixture by sliding it back onto the mounting plate and reinstalling the fixture screws (reversal of figure 1A).

NOTE: The purple and pink/gray wires are only used for 0-10v dimming. For all other applications, do not connect the gray and purple

 **TECH LIGHTING**

7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.techlighting.com