# **Kai Pendant**

700TDKAI\_

1.2



**PENDANTS** 



#### **GENERAL PRODUCT INFORMATION:**



This product is suitable for indoor locations.

This product can be dimmed with a standard electronic dimmer.

This instruction shows a typical installation.


#### **SAVE THESE INSTRUCTIONS!**

### **CAUTION - RISK OF FIRE**


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.


# Adjust the pendant

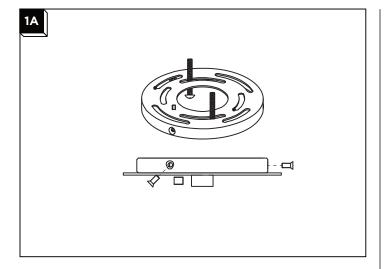

Remove the set screws from the canopy, then remove the mounting plate.

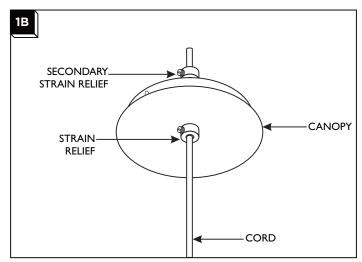


2 Feed the cord through the strain relief, canopy and secondary strain relief.

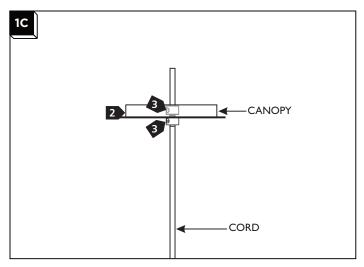


- Adjust the fixture height (from bottom of the fixture shade to top of the canopy) by moving the canopy and strain reliefs up or down.
- 4 When the desired height is achieved, tighten the set screw on the strain relief and secondary strain relief.


# **Install the Canopy**

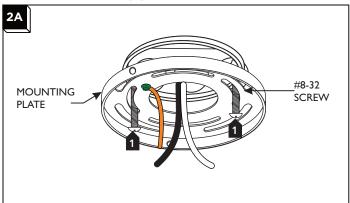


Mount the mounting plate to the electrical box with the two provided #8-32 screws.

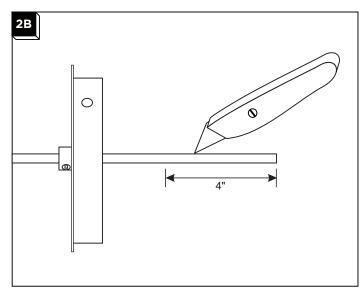

- 2 Leave 6" of the cord behind the canopy for power connections. Cut the excess cord.
- From the end of the cord, strip the insulation 4" using a sharp knife. Make sure not to nick the inner wires.
- 4 Strip the end of the wires.

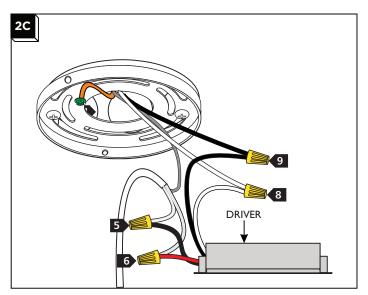

- Connect the negative (black) driver wire to the pendant wire with white tracer with a wire nut.
- Connect the positive (red) driver wire to the remaining pendant wire with a wire nut.
- **7** Connect the fixture and the crossbar ground wire to a suitable ground in accordance with local electrical codes.
- 8 Connect the white driver wire to the neutral power line wire with a wire nut.
- Connect the black driver wire to the hot power line wire with a wire nut.

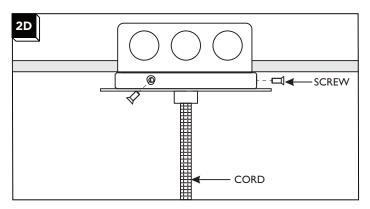

- Place all wires, wire nut connections, driver properly inside the junction box.
- Lift the canopy up against the ceiling and secure it in place by tightening the screws.

### **Notes:**